


13250, 13251 Instructions CampingBox L + Bed Exemplary VW T6 Transporter

1 Installation 13250

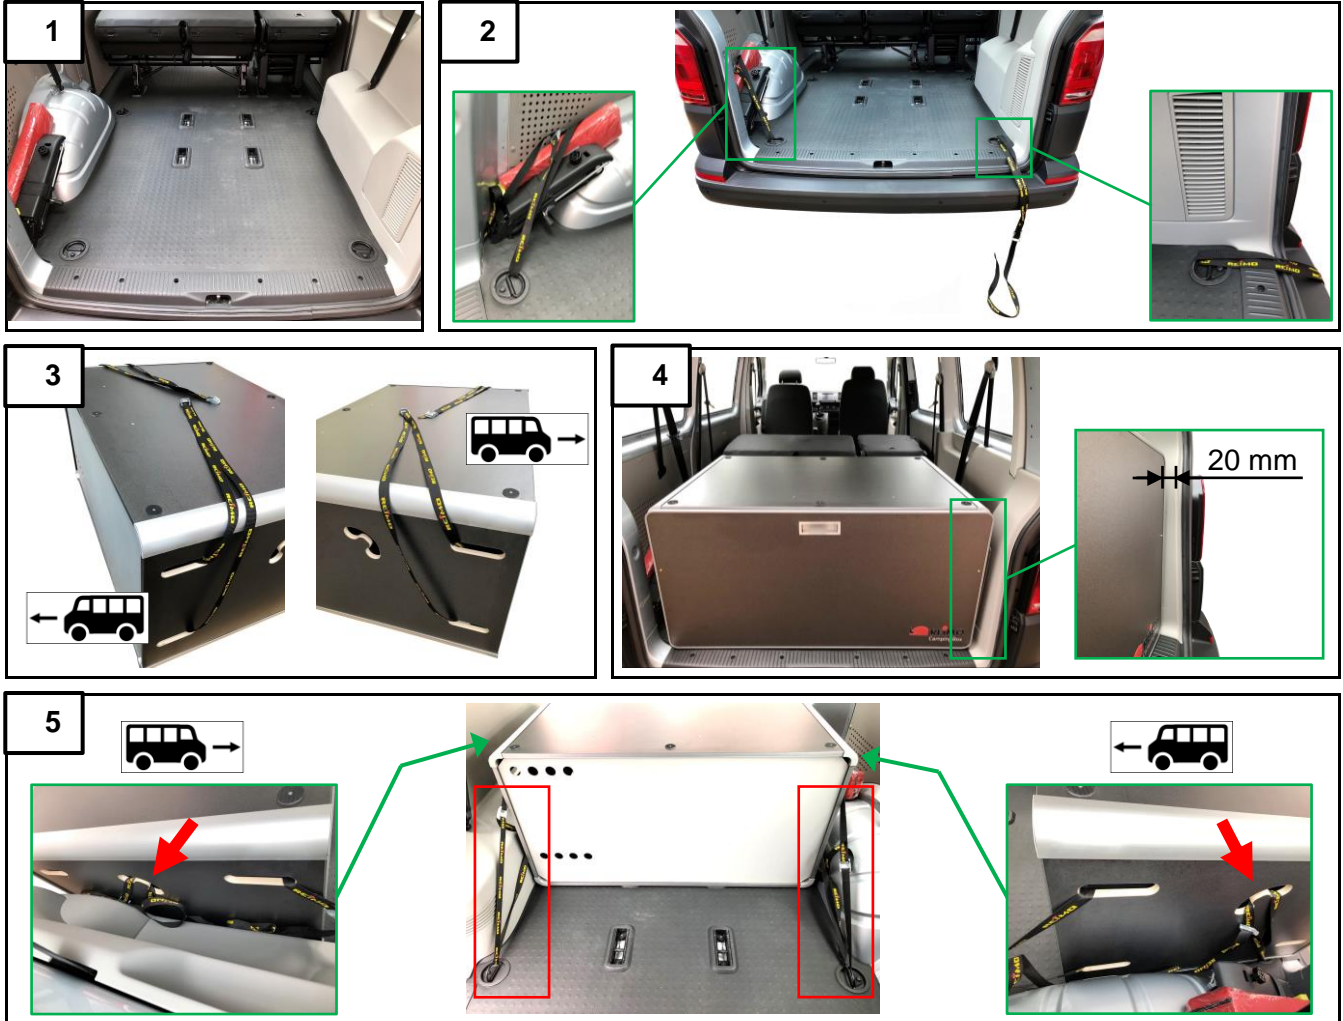

2 Installation 13251

